

## **CONTINUOUS FORMS PROCESSING & MAILING EQUIPMENT**

### **SPEDO ACCESSORIES**



#### **SPEDO INTERFACE UNITS**


**SPEDO 2230 OPTICAL LOOP SWITCH** - Triggers Spedo cutter to continue processing when paper web is available.

**SPEDO 2232 OPTICAL LOOP INTERFACE** - Balances the paper loop between a Spedo cutter and printer, un-winder, etc. Connects to both cutter and paper source to control generated loop.

#### **SPEDO OUTFEED ACCELERATOR UNIT**

A self powered unit which is designed to accelerate forms leaving the cutter.

This unit fits easily to a Spedo cutter and will feed forms into folders, collators and divert stations.

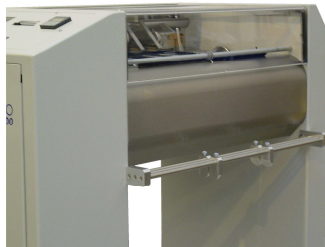

#### **SPEDO WEB GUIDE - 3 BAR & 2 BAR**

Both types of guide are used for stabilising web entry to the Spedo cutter.

The 3 bar unit for use when a centre slit / merge operation is being applied and the 2 bar unit for restricting unwanted movement of paper loops.

#### **SPEDO SP 000 416 STACKING TRAY**

The Spedo stacking tray connects to any Spedo forms cutter, allowing the user to neatly stack the finished forms ready for collection.

The fully adjustable magnetic paper stops make changing between forms sizes quick and simple.



#### **FOR FURTHER INFORMATION PLEASE CONTACT:**

SPEDO UK LTD, 76 WOOLMER WAY, BORDON HAMPSHIRE, GU35 9QF, U.K.

TEL: +44(0)1420 487442 • FAX: +44(0)1420 477827 • E-MAIL: [spedo@spedouk.com](mailto:spedo@spedouk.com) • WEBSITE: [www.spedouk.com](http://www.spedouk.com)